

User manual  
SM-300 Handheld Reader



---

**BoltSafe**

Platinawerf 8

6641 TL Beuningen, Nederland

Phone: +31 (0)24 6790797

[www.boltsafe.com](http://www.boltsafe.com) | [info@boltsafe.com](mailto:info@boltsafe.com)

## Table of contents

<b>1. Preface</b> .....	1
1.1. General.....	1
1.1.1. Repairs and maintenance .....	1
1.2. Reading guide .....	2
1.2.1. Use of the document .....	2
1.3. Relation to other documents.....	2
1.4. Document contents.....	2
1.4.1. Language of original document .....	2
1.4.2. Information in this document .....	2
1.5. Corrections, comments and suggestions .....	2
<b>2. Safety</b> .....	3
2.1. Symbols and markings used .....	3
2.1.1. Warnings.....	3
2.1.2. Mandatory and prohibited actions .....	3
2.1.3. Other symbols and pictograms.....	3
2.1.4. Warning and information blocks .....	4
2.2. General safety instructions .....	5
2.2.1. Liability .....	5
2.2.2. Personnel safety .....	5
2.2.3. Deployment of qualified personnel.....	6
2.2.4. Safety work area .....	6
2.2.5. Safety equipment .....	6
<b>3. Description and operation</b> .....	7
3.1. Intended use .....	7
3.2. Introduction .....	7
3.2.1. Overview .....	7
3.3. Operation.....	8
3.4. Technical specifications .....	8
3.5. Declaration of conformity, CE marking .....	9
3.6. Service life .....	10
<b>4. Commissioning</b> .....	11
4.1. General regulations and instructions.....	11
4.2. Preparation for commissioning .....	11
4.2.1. Charging the device .....	12

4.2.2.	Connecting a CMS Bolt Load Sensor .....	13
4.2.3.	Connect to a computer.....	14
4.2.4.	BoltSafe Connect software (optional).....	15
4.2.5.	Device settings.....	16
<b>5.</b>	<b>Operation and use.....</b>	<b>17</b>
5.1.	General instructions for operation and use.....	17
5.2.	Function keys.....	17
5.2.1.	Overview of function keys .....	17
5.3.	Operation .....	18
5.3.1.	Switch the device on or off .....	18
5.3.2.	Set display lighting .....	19
5.3.3.	Start and stop automatic logging.....	20
5.3.3.1.	Set interval time for automatic logging .....	21
5.3.4.	Manually save a measured value (single log).....	22
5.3.5.	Changing the units of the measured value and reading .....	23
5.4.	Display readings .....	24
<b>6.</b>	<b>Maintenance and inspection .....</b>	<b>25</b>
6.1.	General instructions for maintenance and inspection.....	25
6.2.	Periodic maintenance .....	25
6.3.	Replace internal battery .....	25
6.4.	Update firmware SM-300.....	25
<b>7.</b>	<b>Transport and storage .....</b>	<b>26</b>
7.1.	General instructions for transport and storage.....	26
7.1.1.	Transport .....	26
7.1.2.	Storage .....	26
<b>8.</b>	<b>Malfunctions.....</b>	<b>27</b>
8.1.	General instructions for malfunctions.....	27
8.2.	Troubleshooting.....	27
<b>9.</b>	<b>Decommissioning.....</b>	<b>28</b>
9.1.	Temporary decommissioning.....	28
9.2.	Decommission permanently .....	28
<b>10.</b>	<b>End of life .....</b>	<b>28</b>

# 1. Preface

## 1.1. General

The purpose of this manual is to inform you, the user, about all the relevant precautions and essential operating procedures for the safe and correct operation of the device.

This user manual contains the information you, the user, need to use it as safely, efficiently, and comfortably as possible. In addition to such topics as operation and use, maintenance and troubleshooting which you can carry out yourself if necessary is also covered.

This document contains the instructions for the SM-300 Handheld Reader, referred to by the term 'device'. The term 'system' is used as a more general term to refer to a combination with other **BoltSafe** devices such as the **BoltSafe** sensor(s) and the **BoltSafe** Connect software.

### 1.1.1. Repairs and maintenance

Repairs and maintenance that are not part of the daily maintenance must always be carried out by an experienced and sufficiently trained engineer. Given the complexity of the device, repairs should always be carried out by or in consultation with **BoltSafe**.

#### INFORMATION

ALWAYS READ THE ENTIRE USER MANUAL, SPECIFICALLY THE SAFETY SECTION, BEFORE USING THE DEVICE



#### INFORMATION

ENSURE THAT THE LATEST VERSION OF THIS USER MANUAL, AND RELATED DOCUMENTS, ARE ALWAYS WITH THE DEVICE



#### NOTE

- THE DEVICE IS DESIGNED FOR USE WITH BOLTSAFE SENSOR(S) POSSIBLY IN COMBINATION WITH OTHER BOLTSAFE EQUIPMENT LISTED IN THIS DOCUMENT
- THE USE OF OTHER TYPES OR BRANDS MAY RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE



## 1.2. Reading guide

This user manual consists of several chapters describing the operation and regular maintenance of the device.

### 1.2.1. Use of the document

Read the document completely;

- Make sure you understand all instructions
- Follow safety instructions to avoid injury or damage to equipment
- Always carry out the procedures completely and in the given order

## 1.3. Relation to other documents

This document is related to documents:

- Documentation **BoltSafe** CMS Bolt Load sensors
- Documentation **BoltSafe** Connect (software)

## 1.4. Document contents

### 1.4.1. Language of original document

The source language of this user manual is Dutch. A translation can result in differences of interpretation regarding the content and meaning of the text. In all cases, in the event of a dispute, the Dutch version of this document will be regarded as the sole and authentic source for determining the content and meaning of the text.

### 1.4.2. Information in this document

The information in this manual has been compiled with the greatest possible care. However, this does not guarantee that this document is free of typos, errors or outdated information. Therefore, no rights or claims can be derived from the content of this manual.

**BoltSafe** cannot be held liable for any direct, indirect, special or consequential damage that might arise as a result of the information contained in this manual. In view of product development and product improvements, **BoltSafe** reserves the right to change products or specifications at any time without prior notice.





## 1.5. Corrections, comments and suggestions

Corrections, comments and suggestions for improvement can be made known, or sent, to **BoltSafe**.









## 2. Safety

### 2.1. Symbols and markings used<sup>1</sup>





#### 2.1.1. Warnings

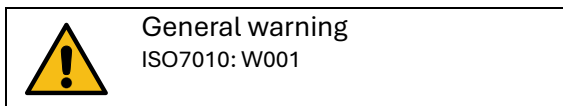

#### 2.1.2. Mandatory and prohibited actions

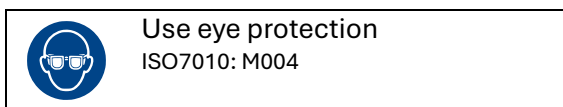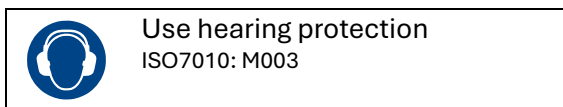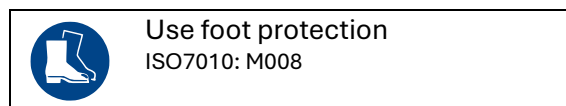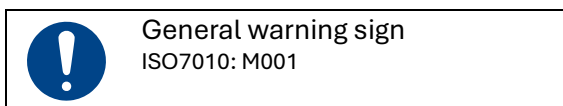

#### 2.1.3. Other symbols and pictograms

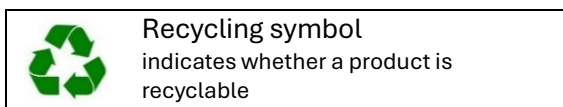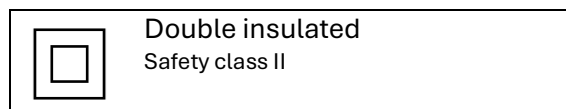

<sup>1</sup> Not all symbols shown are included in this user manual, they are also indicative for the user in connection with related user manuals and/or instructions

#### 2.1.4. Warning and information blocks


This publication may contain several warning blocks and symbols. They are intended to draw your attention to potential dangers. Always follow the information in the warning blocks to prevent possible injury, material or environmental damage.

The warning blocks<sup>2</sup> may also contain additional symbols.

	<p><b>DANGER</b> INDICATES AN IMMINENTLY DANGEROUS SITUATION FAILURE TO AVOID AN IMMINENTLY DANGEROUS SITUATION <u>WILL</u> RESULT IN DEATH OR SERIOUS INJURY AND/OR MATERIAL OR ENVIRONMENTAL DAMAGE</p> <ul style="list-style-type: none"><li>▪ This warning block has a red header</li></ul>
--	---

	<p><b>WARNING</b> INDICATES A POTENTIALLY DANGEROUS SITUATION FAILURE TO AVOID A POTENTIALLY DANGEROUS SITUATION CAN RESULT IN DEATH OR SERIOUS INJURY AND/OR MATERIAL OR ENVIRONMENTAL DAMAGE</p> <ul style="list-style-type: none"><li>▪ This warning block has an orange header</li></ul>
--	--

	<p><b>NOTE</b> INDICATES A POTENTIALLY DANGEROUS SITUATION FAILURE TO AVOID A POTENTIALLY DANGEROUS SITUATION CAN RESULT IN INJURY AND/OR MATERIAL OR ENVIRONMENTAL DAMAGE</p> <ul style="list-style-type: none"><li>▪ This warning block has a yellow header</li></ul>
--	---

	<p><b>INFORMATION</b> INDICATES OR REFERS TO ADDITIONAL INFORMATION THAT IS DIRECTLY OR INDIRECTLY RELATED TO THE DEVICE OR TO INFORMATION FROM THIS USER MANUAL</p> <ul style="list-style-type: none"><li>▪ This warning block has a blue header</li></ul>	
--	---	---

---

<sup>2</sup> Not all described warning blocks are included in this user manual, they are also indicative for the user in connection with related user manuals and/or instructions

## 2.2. General safety instructions

### 2.2.1. Liability

**BoltSafe** cannot be held responsible for injury or damage resulting from unintended use of the equipment. The equipment is designed and intended only for the purpose described in the relevant documents. Use not described is considered unintended use and may result in injury or damage.

Unintended uses include:

- use of equipment not approved by **BoltSafe**
- use of equipment that is inappropriate or incompatible with the **BoltSafe** device
- alter or modify equipment in any way
- allowing unqualified personnel to perform tasks on or with the equipment

### 2.2.2. Personnel safety

- Do not allow unqualified personnel to perform tasks on or with the device
- Keep unqualified personnel, children and animals away from the device
- Do not use the device under the influence of mood-altering substances
- Comply with local labour and safety laws and environmental regulations

#### **WARNING**

- USE APPROPRIATE PROTECTIVE EQUIPMENT WHICH COMPLIES WITH APPLICABLE REGULATIONS
- WEAR PERSONAL PROTECTIVE EQUIPMENT (PPE) SUCH AS:
  - SAFETY HELMET, SAFETY GLASSES, HEARING PROTECTION, SAFETY GLOVES, SAFETY SHOES AND PROTECTIVE CLOTHING



### 2.2.3. Deployment of qualified personnel

The term “qualified personnel” refers to individuals who thoroughly understand the equipment and its safe installation, operation and maintenance.

- Qualified personnel are physically capable of performing the required tasks, are familiar with all relevant safety instructions and regulations and trained to install, operate and maintain the equipment safely

**NOTE**

IT IS THE RESPONSIBILITY OF THE COMPANY OPERATING THE EQUIPMENT TO ENSURE THESE REQUIREMENTS ARE MET



### 2.2.4. Safety work area

**NOTE**

- KEEP THE WORK AREA CLEAN AND WELL LIT
- KEEP THE WORK AREA FREE OF UNWANTED OBSTACLES
- ENSURE FREE PASSAGES IN THE WORK AREA DURING OPERATION

### 2.2.5. Safety equipment

- Only use equipment approved by **BoltSafe**
- Only use equipment that is suitable or compatible with the **BoltSafe** device
- Do not modify the device in any way
- Inspect the device for visual damage before each use. Follow device maintenance instructions
- Do not remove or disable safety features on the device

### 3. Description and operation

#### 3.1. Intended use

The **BoltSafe SM-300 Handheld Reader** is a device that can read and store data from a CMS Bolt Load Sensor from **BoltSafe** (CMS: Continuous Monitoring System). The device can be used with various CMS sensors from **BoltSafe**.

#### 3.2. Introduction

##### 3.2.1. Overview

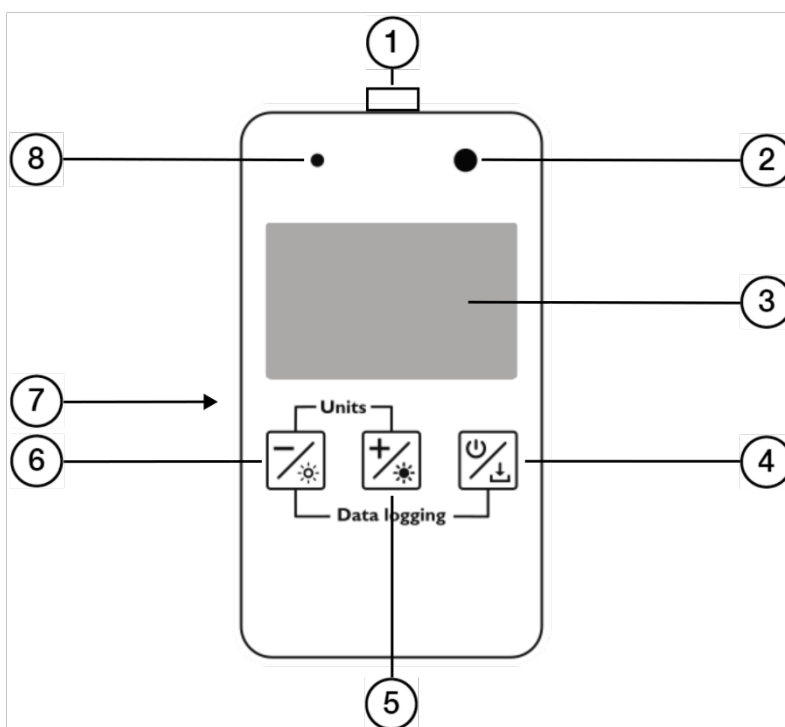


image 1

- |   |   |   |
|---|---|---|
| ① | Connector for sensor cable  | - see § 4.2.2 page 13                                 |
| ② | Licht sensor  | - see § 5.3.2 page 19                                 |
| ③ | Display   | - see § 5.4 page 24                                   |
| ④ | Function key 3  | - see § 5.2 page 17                                   |
| ⑤ | Function key 2  | - see § 5.2 page 17                                   |
| ⑥ | Function key 1  | - see § 5.2 page 17                                   |
| ⑦ | USB-C connector   | - see § 4.2.1 page 12   § 4.2.3 page 14               |
| ⑧ | Led   |   |
|   | <ul style="list-style-type: none"> <li>• green flashing: save record (log)</li> <li>• red: error message</li> </ul> | <p>- see § 5.3.3 page 20</p> <p>- see § 8 page 27</p> |

### 3.3. Operation

Handheld reader for reading and storing a CMS Bolt Load Sensor.

The SM-300 Handheld-Reader is a device that reads and stores data from a CMS Bolt Load Sensor from **BoltSafe** (CMS: Continuous Monitoring System).

The CMS sensor has a connection cable that can be connected directly to the SM-300. The SM-300 Handheld Reader then shows the value of the connected sensor on the display.

Data can be logged on the device itself or downloaded to a PC.

The SM-300 Handheld Reader can be connected to a PC equipped with **BoltSafe** Connect or linked via the **BoltSafe** Connect app (Android and iOS).

### 3.4. Technical specifications

Type : BoltSafe SM-300 Handheld Reader

Serial number : See rear of device

Dimensions : 71 x 134 x 23 mm (WxLxH)

Weight : 290 grams

Battery : Rechargeable Li-Ion battery 3.7V/1920mAh/7.03Wh

Charging : 5Vdc 350mA through USB-C

- see also ⑦ image 1 page 7

Operating time: 72 hours

Standby : 6 months

Connector : M12x1, 5P, Female connector (BoltSafe CMS standard)

- see also ① image 1 page 7

Display : LCD Display (48 x 28 mm) with adjustable lighting

- see also ③ image 1 page 7

Operating temperature : -20 °C tot +50 °C

Protection Rating : IP54

### 3.5. Declaration of conformity, CE marking

The **BoltSafe** SM-300 Handheld Reader is CE marked <sup>3</sup>.

This is visibly located on the back of the device.

- see also image 2 page 9

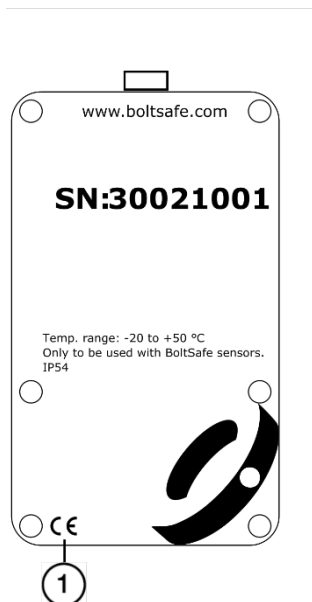


image 2

① CE marking

#### INFORMATION

IF THE MODIFIED DEVICE IS RE-IMPORTED OR OFFERED IN A COUNTRY THAT FALLS WITHIN THE SCOPE OF THE EUROPEAN MACHINERY DIRECTIVE 2006/42/EC AND/OR REGULATION (EU) 2023/1230, THE IMPORTER/PROVIDER IS RESPONSIBLE FOR THE INSPECTION AND WRITTEN CONFIRMATION. THAT THE CONDITION AND STATUS UPON IMPORT INTO THE EC COMPLIES WITH THE STANDARDS AND GUIDELINES STATED IN THE DECLARATION OF CONFORMITY



<sup>3</sup> Given product developments and product improvements, it is possible that the above declaration is replaced by a more recent version.

### 3.6. Service life

Life expectancy is highly dependent on usage, periodic maintenance and events. As your **BoltSafe** device is used over the years, parts wear out and failures and/or defects may occur.

Due to these variable factors, it is not possible to give an unequivocal life expectation. Under normal use, the technical lifespan of the device will be comparable to similar devices.

- see also § 10 page 28

#### **INFORMATION**

THE LIFE EXPECTANCY IS HIGHLY DEPENDENT ON USAGE, INTERIM MAINTENANCE AND EVENTS

INCORRECT USE OR INCIDENTS WITH THE DEVICE CAN GREATLY SHORTEN THE SERVICE LIFE

THE USER IS EXPRESSLY RESPONSIBLE FOR CORRECT USE AND MAINTENANCE OF THE DEVICE



#### **INFORMATION**

NO RIGHTS CAN BE DERIVED FROM THE LIFE EXPECTATIONS, NOR CAN THIS LEAD TO AN EXTENSION OF WARRANTY OBLIGATIONS AND/OR ANY LIABILITY ON THE PART OF THE SUPPLIER AND/OR MANUFACTURER OF BOLTSAFE PRODUCTS



## 4. Commissioning

### 4.1. General regulations and instructions

#### INFORMATION

ALWAYS READ THE ENTIRE USER MANUAL, SPECIFICALLY THE SAFETY SECTION, BEFORE USING THE DEVICE



### 4.2. Preparation for commissioning

#### NOTE

- CHECK THAT THE CONNECTOR IS CLEAN AND FREE OF DIRT OR GREASE
- CHECK THAT THE CMS SENSOR CABLE HAS NO BREAKS OR KINKS
- CHECK THAT THE CHARGER SPECIFICATIONS MATCH THE DEVICE REQUIREMENTS BEFORE CHARGING
- FOLLOW ALL STEPS BEFORE SWITCHING ON THE DEVICE



#### 4.2.1. Charging the device

To charge the SM-300 Handheld Reader, use a 5Vdc 350mA charger which is equipped with a standard USB-C connector.

- see also § 3.4 page 8

- see also image 3 page 12

- 1** Plug the USB-C plug of the charger into the USB-C connector of the SM-300
- 2** Connect the charger to the correct power source
- 3** After charging, remove the charger from the power source
- 4** Remove the charger's USB-C plug from the USB-C connector of the SM-300

- The battery status is shown at the top right of the display
  - see also image 3 page 12
  - see also ③ § 5.4 page 24


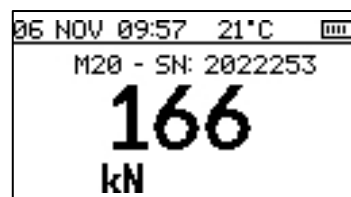


image 3

- ① USB-C connector

**NOTE**

BE SURE THAT THE CHARGER MEETS THE REQUIRED SPECIFICATIONS

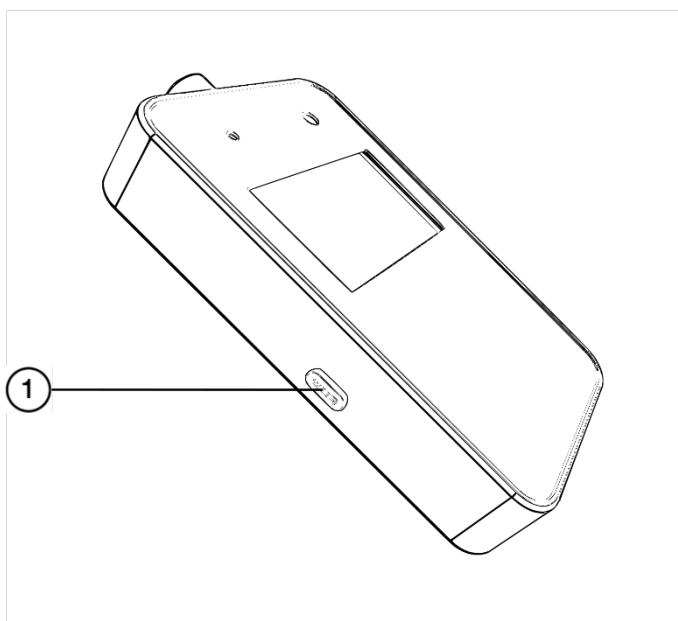

## 4.2.2. Connecting a CMS Bolt Load Sensor

**NOTE**

- CHECK THAT THE CONNECTOR IS CLEAN AND FREE OF DIRT OR GREASE
- CHECK THAT THE CMS SENSOR CABLE HAS NO BREAKS OR KINKS

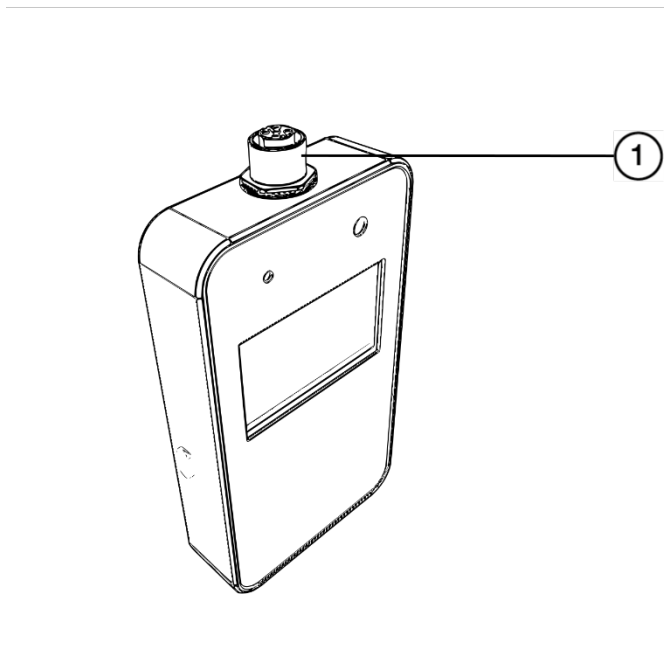


image 4

- 1** Connect the connector of the sensor cable to the connector of the reader  
- see also image 4 page 13
- 2** Tighten the ring of the connector hand-tight so that the connection is secured

**NOTE**

DO NOT OVERTIGHTEN THE RING TO AVOID DAMAGE TO THE THREADS

**INFORMATION**

FOR THE USE OF THE CMS BOLT LOAD SENSOR, PLEASE REFER TO THE DOCUMENTATION OF THE CMS BOLT LOAD SENSOR



#### 4.2.3. Connect to a computer

To connect the SM-300 Handheld Reader to a computer for use with **BoltSafe Connect**<sup>4</sup>, there is a USB-C connector on the side.

- see also § 4.2.4 page 15

- see also image 5 page 14

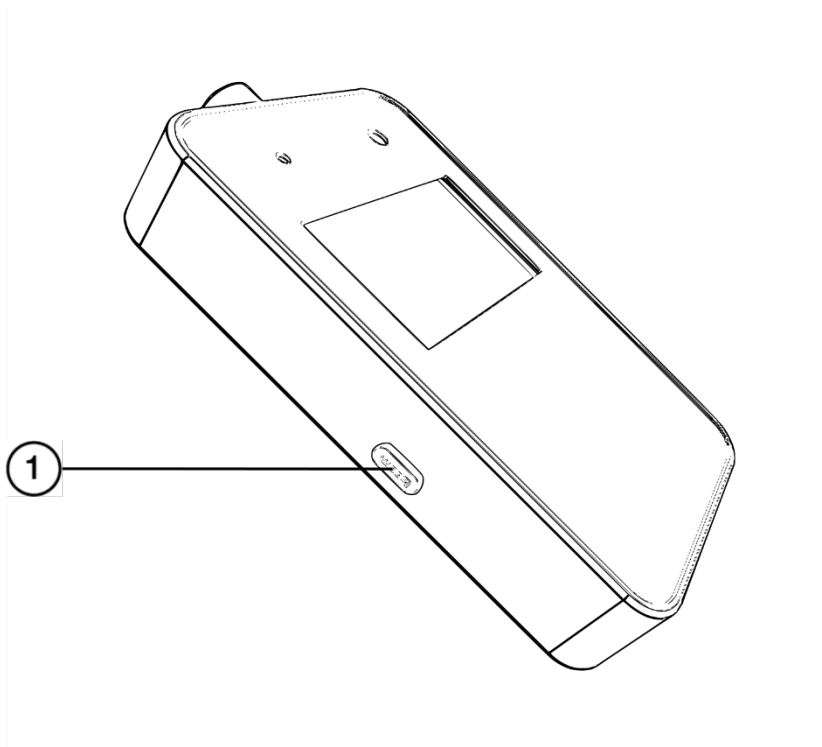


image 5

① USB-C connector

---

<sup>4</sup> BoltSafe Connect is available for Windows 10 and 11

#### 4.2.4. BoltSafe Connect software (optional)

The SM-300 Handheld Reader can be used with **BoltSafe** Connect. The use of this software is not necessary for the proper functioning and/or use of the device.

The **BoltSafe** Connect software is available for free for Windows 10 and 11. The software can be downloaded from [www.boltsafe.com](http://www.boltsafe.com).

- see also image 6 page 15



image 6

#### INFORMATION

FOR USE AND SETTINGS OF THE SOFTWARE, PLEASE REFER TO THE BOLTSAFE CONNECT USER INSTRUCTIONS



#### INFORMATION

IF BOLTSAFE CONNECT SOFTWARE DOES NOT RECOGNIZE THE READER AFTER CONNECTING, THE REFRESH OPTION IN BOLTSAFE CONNECT MUST BE USED



#### 4.2.5. Device settings

Using the function keys, or by a combination of simultaneously operating the function keys, functions can be operated or settings changed.

For this, further reference is made to § 5 *page 17*

## 5. Operation and use

### 5.1. General instructions for operation and use

#### INFORMATION

ALWAYS READ THE ENTIRE USER MANUAL, SPECIFICALLY THE SAFETY SECTION, BEFORE USING THE DEVICE



#### NOTE

- CHECK THAT THE CONNECTOR IS CLEAN AND FREE OF DIRT OR GREASE
- CHECK THAT THE CMS SENSOR CABLE HAS NO BREAKS OR KINKS



### 5.2. Function keys

#### 5.2.1. Overview of function keys

The function keys are located on the front. With these function keys, or by a combination of operating the function keys simultaneously, functions can be operated or settings changed.

- see also image 1 page 7 and image 7 page 17

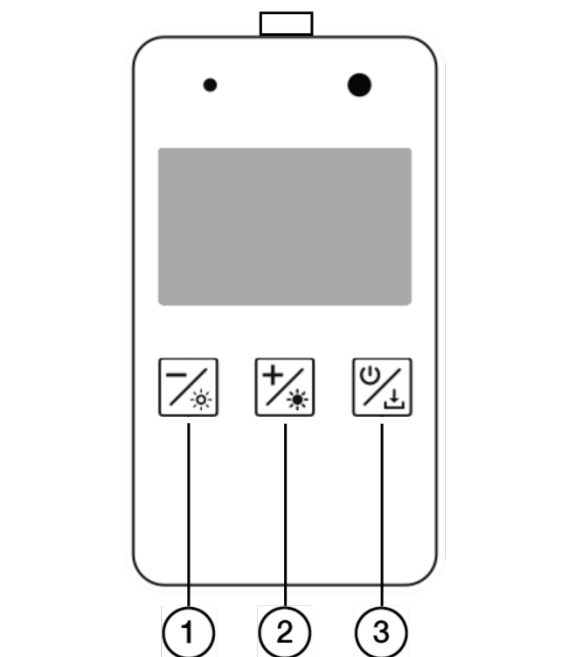


image 7

- ① Function key 1 - see § 5.3.2 page 19 | § 5.3.3 page 20 | § 5.3.5 page 23
- ② Function key 2 - see § 5.3.2 page 19 | § 5.3.5 page 23
- ③ Function key 3 - see § 5.3.1 page 18 | § 5.3.3 page 20 | § 5.3.5 page 23

## 5.3. Operation

### 5.3.1. Switch the device on or off

#### 5.3.1.1. Switch on device

The device can be switched on by briefly pressing one of the function keys.

- see also image 7 page 17

#### 5.3.1.2. Switch off device

To switch off the device, press and hold the function key ③. The display will go out and the device will switch off.

- see also image 8 page 18

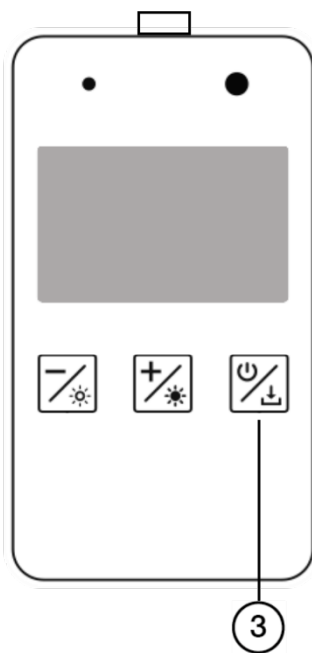


image 8

③ Switch off with function key

### 5.3.2. Set display lighting

As standard, the lighting of the display is controlled by the built-in light sensor.

- see also ② § 3.2.1 page 7

The brightness of the lighting can be adjusted manually.

- Function key ① - decrease lighting
- Function key ② - increase lighting

- see also image 9 page 19

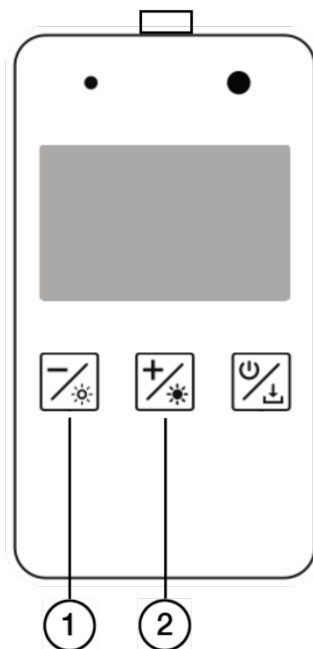


image 9

- ① Decrease lighting display
- ② Increase lighting display

### 5.3.3. Start and stop automatic logging

Start automatic logging of the measured values by pressing the function keys **1** and **3** simultaneously. Automatic logging will be started.

- see also § 5.3.3.1 page 21

Automatic logging can be ended by pressing the function keys **1** and **3** simultaneously again.

- see also image 10 page 20

- Every time a record <sup>5</sup> (log) is written, the LED will flash green.

- see also © § 3.2.1 page 7

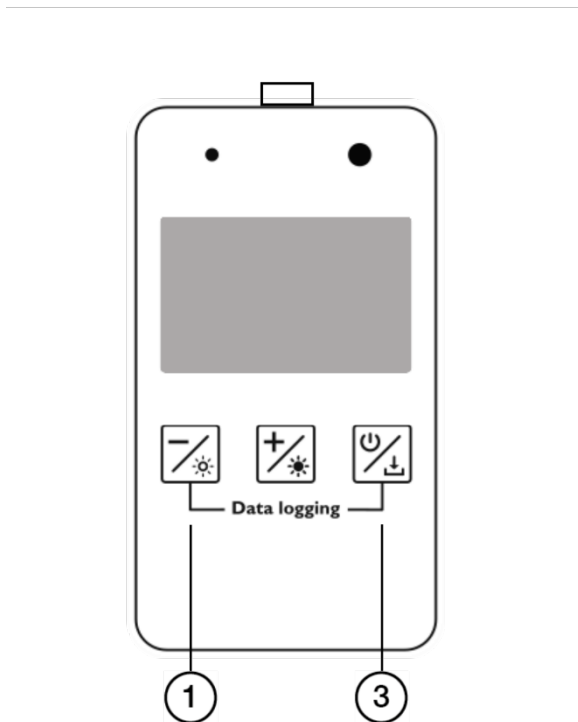


image 10

**1** + **3** Enable or disable automatic logging

<sup>5</sup> A record consists of:

- sensor serial number
- measured value (load)
- time and date stamp
- log type (automatic or manual)
- temperature (temperature sensor value CMS Bolt Load Sensor)
- any error messages (error codes)

### 5.3.3.1. Set interval time for automatic logging

The interval time for logging the measured values can be set manually.

- 1** Press function key **1** and **3** to start automatic logging  
 - see also § 5.3.3 page 20  
 - see also image 10 page 20
- 2** Press function key **1** or **2** to increase or decrease interval time [hours]  
 - see also image 1 page 7  
 - see also image 11 page 21
- 3** Press function key **3** to go to next field [minutes]
- 4** Press function key **1** or **2** to increase or decrease interval time [minutes]  
 - see also image 1 page 7  
 - see also image 11 page 21
- 5** Press function key **3** to go to next field [seconds]
- 6** Press function key **1** or **2** to increase or decrease interval time [seconds]  
 - see also image 1 page 7  
 - see also image 11 page 21
- 7** Press function key **3** to go to cancel/start screen  
 - see also image 12 page 21
- 8** Press function key **1** to cancel setting and automatic logging  
 - see also image 12 page 21
- 9** Press function key **3** to save setting and start automatic logging  
 - see also image 1 page 7  
 - see also image 12 page 21

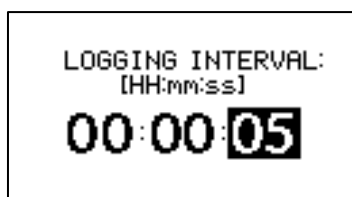


image 11

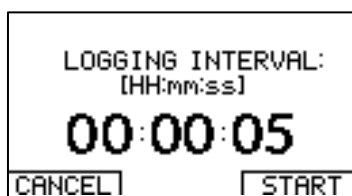


image 12

#### 5.3.4. Manually save a measured value (single log)

In addition to the automatic log mode, it is also possible to save a single measurement value (record). To do this, function key **3** must be pressed briefly. A single measurement will then be logged.

- see also image 13 page 22

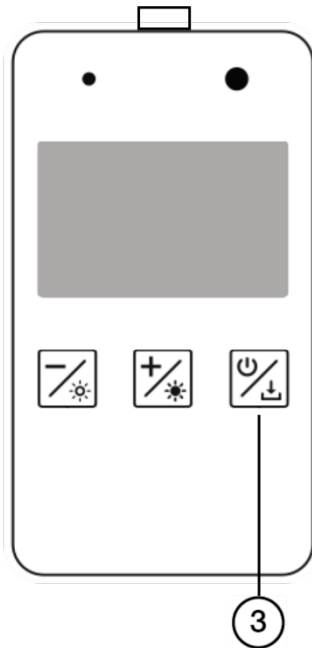


image 13

- ③ Save measured value manually (single log)

### 5.3.5. Changing the units of the measured value and reading

The units shown on the display and logged can be changed.  
A choice can be made from;

- kN / °C
- lbf / °F

You can change units by pressing the function keys ① and ② simultaneously. The units will be changed.

- see also image 14 page 23

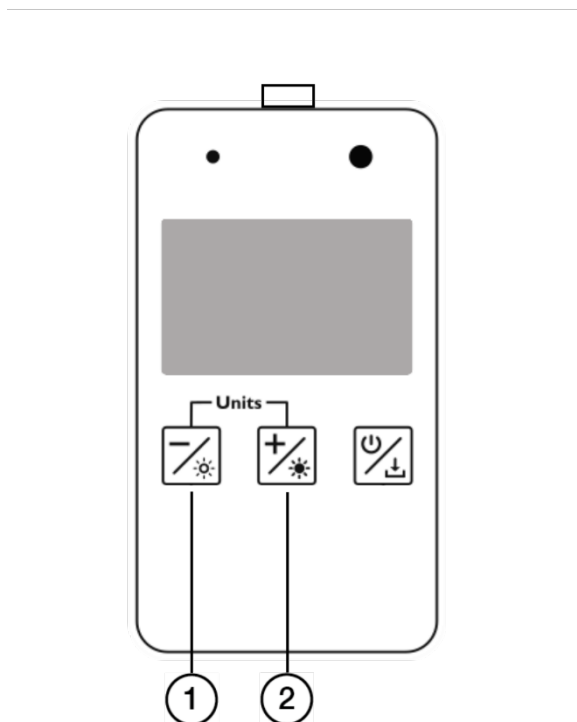


image 14

① + ② Change units (kN / °C of lbf / °F)

#### INFORMATION

THE UNITS SHOWN ON THE DISPLAY ARE THE SAME AS THE UNITS THAT ARE LOGGED



## 5.4. Display readings

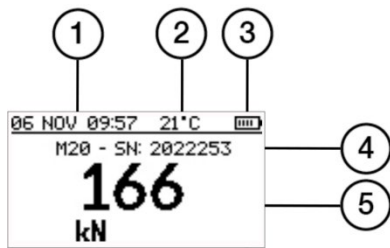


image 15

- ① Date and time
- ② Temperature  
(temperature sensor value in CMS Bolt Load Sensor)
- ③ Battery status  
- see also § 4.2.1 page 12
- ④ Type and serial number CMS Bolt Load Sensor
- ⑤ Reading measured value and set unit

### USB connection

When connected to a computer via the USB-C connection, the USB symbol will be shown on the display.

- see also image 16 page 24

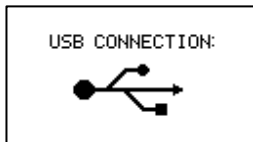


image 16

### Used storage

The percentage of records saved is shown on the display. Stored records can be deleted via **BoltSafe Connect**.

- see also image 17 page 24

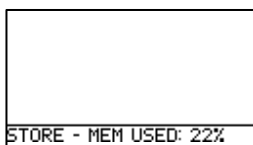


image 17

### Update firmware

If a firmware update is started, this will be shown on the display for confirmation before carrying out.

- see also § 6.4 page 25

- see also image 18 page 25

## 6. Maintenance and inspection

### 6.1. General instructions for maintenance and inspection

#### NOTE

ALWAYS CONTACT BOLTSAFE BEFORE REMOVING THE BACK OF THE DEVICE



### 6.2. Periodic maintenance

Regular maintenance is required for the safe and effective operation of your **BoltSafe** device.

- Clean the outside of the device with a dry cloth
- Clean the function keys
- Check the LCD screen for damage
- Check the connector for damage and contamination
  - connection points and screw thread
- Check the USB-C connector for damage and contamination

### 6.3. Replace internal battery

If the internal rechargeable battery of the device no longer functions properly, it must be replaced. Always contact **BoltSafe** for this.

#### NOTE

ALWAYS CONTACT BOLTSAFE BEFORE REMOVING THE BACK OF THE DEVICE



### 6.4. Update firmware SM-300

**BoltSafe** Connect allows the firmware of the SM-300 Handheld Reader to be updated to a newer version, if available. When the firmware update is started, this will be shown on the display for confirmation before the execution takes place.

- see also image 18 page 25



image 18

#### INFORMATION

FOR USE AND SETTINGS OF THE SOFTWARE, PLEASE REFER TO THE BOLTSAFE CONNECT USER INSTRUCTIONS



## **7. Transport and storage**

### **7.1. General instructions for transport and storage**

#### **7.1.1. Transport**

**NOTE**

THE BOLTSafe SM-300 HANDHELD READER IS AN ELECTRONIC MEASURING INSTRUMENT

- TRANSPORT THE DEVICE WITH CARE

DO NOT DROP THE DEVICE OR HIT IT AGAINST OTHER OBJECTS

#### **7.1.2. Storage**

**NOTE**

STORE IN A DRY PLACE AND UNDER NORMAL AMBIENT TEMPERATURES

## 8. Malfunctions

### 8.1. General instructions for malfunctions

If a fault occurs, the LED will light red.

- see also © § 3.2.1 page 7

### 8.2. Troubleshooting

Try to find a solution to the problem using the table below.

- see also table 1 page 27

If you cannot find a solution, please contact your local **BoltSafe** representative.

Issue/status	Possible cause	Solution
Red LED lights up	Error message	Switch the device off and on again - see also § 5.3.1 page 18
Red LED remains on after switching the device off and on		<b>Always contact BoltSafe for this</b>

table 1

#### NOTE

ALWAYS CONTACT BOLTSAFE BEFORE REMOVING THE BACK OF THE DEVICE



## 9. Decommissioning

### 9.1. Temporary decommissioning

If the device does not function correctly, it is recommended to temporarily take it out of use to prevent unintended use and/or deployment of the device. This so that it can be repaired or submitted for repair. Temporarily taking it out of use can be done, for example, by labeling the device and/or applying other clear markings so that it is recognizable to everyone that the device cannot and may not be used.

### 9.2. Decommission permanently

When the device has reached the end of its service life, it must be taken out of service permanently to avoid dangerous situations. The device must be completely disabled so that it can no longer be deployed and/or used.

- see also § 10 page 28

## 10. End of life

If the device has reached the end of its lifespan, it must be dismantled and disposed of in accordance with local (environmental) legislation;

- 1** Remove the internal battery
- 2** Remove the cabling
- 3** Disassemble as many loose parts as possible
- 4** Sort all dismantled parts by type and material type and dispose of them in accordance with local (environmental) legislation

### INFORMATION

- CHECK DISMANTLED PARTS FOR POSSIBLE REUSABILITY
- DISPOSE OF REUSABLE MATERIALS IN ACCORDANCE WITH THE LOCAL (ENVIRONMENTAL) LEGISLATION







## Document history

Date	Version number	Comment
14.10.2024	001	1st publication

The information in this publication has been compiled with the greatest possible care. However, this does not guarantee that this document is free of typos, errors or outdated information. No rights or claims can therefore be derived from the content of this publication. **BoltSafe** cannot be held liable for any direct, indirect, special or consequential damage that might arise as a result of the information contained in this publication. In view of product development and product improvements, **BoltSafe** reserves the right to change products or specifications at any time without prior notice.

© 2024 Copyright **BoltSafe**. All rights reserved. No part of this publication may be reproduced and/or published by print, photocopy, microfilm or in any other way without prior written permission from **BoltSafe**.



---

**BoltSafe**

Platinawerf 8

6641 TL Beuningen, Nederland

Phone: +31 (0)24 6790797

[www.boltsafe.com](http://www.boltsafe.com) | [info@boltsafe.com](mailto:info@boltsafe.com)

